



BLUSH TOY BOX ASSEMBLY INSTRUCTION

WWW.KIDSAW.CO.UK


A) List of parts

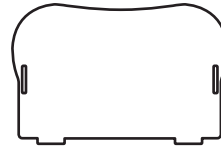


1) Top Panel

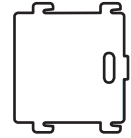

2) Side Panels x 2

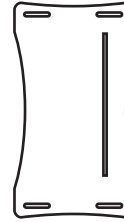

3) Front Panel

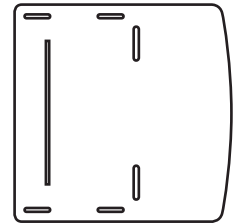


4) Back Panel





5) Base Panel

B) Steps to Assembly ADULT ASSEMBLY REQUIRED

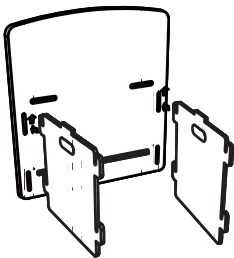


Step 1 - slot side panels onto back panel.

Step 2 - slot front panel onto side panels.

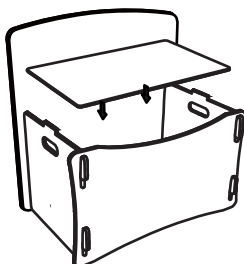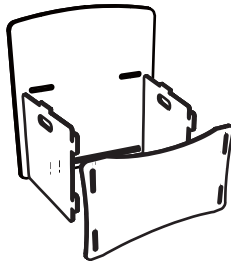


Step 3 - Put base panel inside.

B) Steps to Assembly ADULT ASSEMBLY REQUIRED

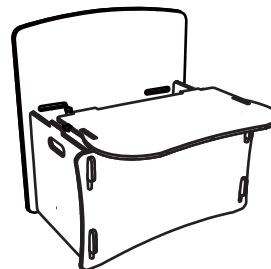

Step 4 - insert top panel onto back panel.

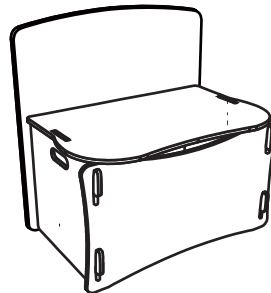

Assembly complete

ANY QUESTIONS? GIVE US A CALL DIRECT

KIDSAW PUZZLE FURNITURE is designed and distributed by kidsaw limited.UK.
For any queries, missing parts, comments or suggestions on the product, please call our customer support at +44 (0) 116 2519551 during Monday - Friday 9:00 a.m. to 4:30 p.m. ;
Or, mail to 47-55 Northgate Street, Leicester, LE3 5BZ; Or, email to support@kidsaw.co.uk.
Thank you for purchasing KIDSAW PUZZLE FURNITURE