

## BLUSH WARDROBE ASSEMBLY INSTRUCTION

WWW.KIDSAW.CO.UK


A MEMBER OF  
**ACID**  
ANTI COPYING IN DESIGN

All copyright, design rights and intellectual property rights existing in our designs and products and in the images, text and design of our website/marketing material are and will remain the property of Kidsaw Limited. We will treat any infringement of these rights seriously.




Wardrobe - ASSEMBLY INSTRUCTIONS - 1


### A) List of parts

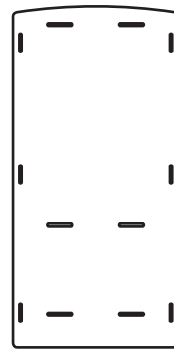

1 Back Panel

 

2 Side Panel x 2

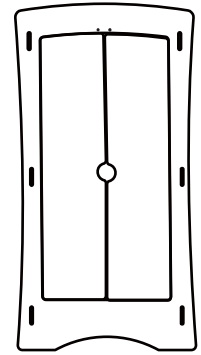

3 Front Panel Door



4 T-Lock x 3



 
5 Top and Base Panels x 2



6 Stopper



7 Hanging Rail



8 Shelf




9 Screw x 2




Wardrobe - ASSEMBLY INSTRUCTIONS - 2


### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

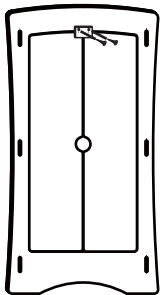


Step 1 - screw stopper on front panel

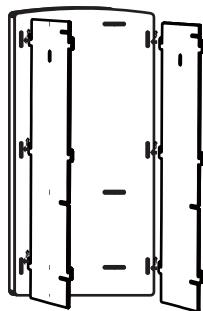

Step 2 - slot side panels onto back panel

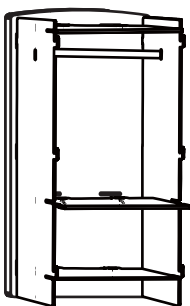


Step 3 - slot top, shelf and base panels and hanging rail onto side panels.

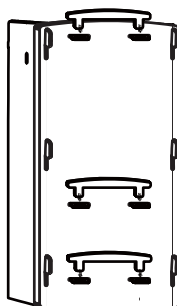

Step 4 - insert 3 T-lock on back of back panel.

### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

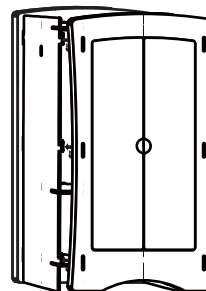

Step 5 - slot front panel and door onto the side panels.



Assembly complete

ANY QUESTIONS? GIVE US A CALL DIRECT

KIDSAW PUZZLE FURNITURE is designed and distributed by kidsaw limited.UK. For any queries, missing parts, comments or suggestions on the product, please call our customer support at +44 (0) 116 2519551 during Monday - Friday 9:00 a.m. to 4:30 p.m. ; Or, mail to 47-55 Northgate Street, Leicester, LE3 5BZ; Or, email to support@kidsaw.co.uk. Thank you for purchasing KIDSAW PUZZLE FURNITURE



Wardrobe - ASSEMBLY INSTRUCTIONS - 3



Wardrobe - ASSEMBLY INSTRUCTIONS - 4