

SPEED RACER JUNIOR BED ASSEMBLY INSTRUCTION

WWW.KIDSAW.CO.UK

Kidsaw Speed Racer Junior Bed assembly instructions

Before you start

Warnings

Important: Retain all instructions for future use.
Unwrap all packaging materials and place components on top of the carton box or a clean surface to prevent marks.
This product should only be used on firm, level ground.
Keep small parts out of reach of children.

Do's

Follow each assembly step in order to prevent incorrect assembly.
Assemble on a clean soft surface to avoid damage.
Check the pack and make sure you have all the parts.
Ensure that this product is fully assembled as illustrated before use.

When you are ready to start, make sure you have plenty of space and a clean area for assembly.

Don't's

Do not use this product if parts are missing, damaged or worn.

Number of people to assemble

One person to assemble.


Time to assemble

Under 10 minutes.


Tradesman's tips

So simple to slot together, you shouldn't need any tips. Other than put the kettle on before you start, it may be boiled by the time you have finished.

A) List of parts

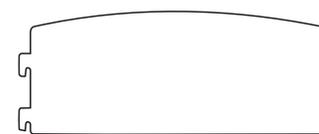

A) Headboard

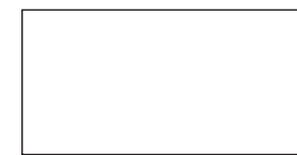


B) Slats x4




C) Central Support



D) Footboard

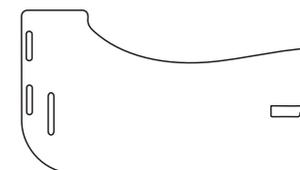

E) Front Side Rails x 2

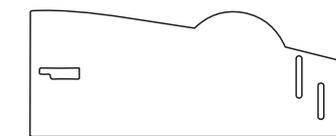

F) Back Side Rails x 2



G) Slat Support x 2




H) Dowels x 4


B) Steps to Assembly ADULT ASSEMBLY REQUIRED



Step 1 - Put dowels onto front and back side panels

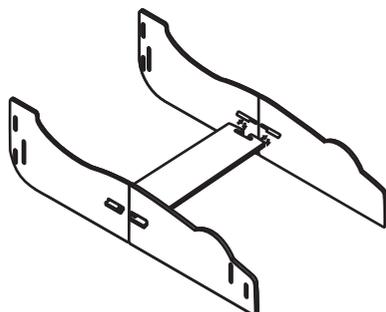


Step 2 - Insert central support onto side rails

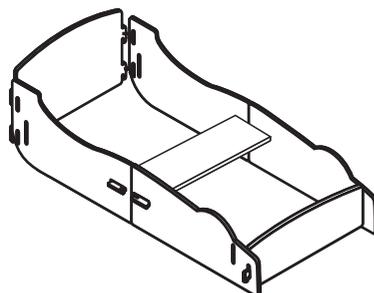



Step 3 - Slot both headboard and footboard onto side rails

B) Steps to Assembly ADULT ASSEMBLY REQUIRED

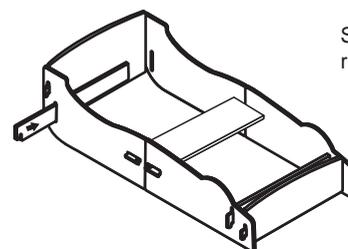

Step 4 - Slot slat support onto side rails

Step 5 - Place slats on top of slat and central supports

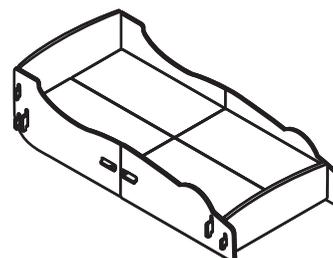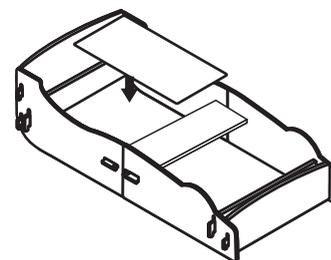

Assembly complete

ANY QUESTIONS? GIVE US A CALL DIRECT

KIDSAW PUZZLE FURNITURE is designed and distributed by kidsaw limited.UK.
For any queries, missing parts, comments or suggestions on the product, please call our customer support at +44 (0) 116 2519551 during Monday - Friday 9:00 a.m. to 4:30 p.m. ; Or, mail to 47-55 Northgate Street, Leicester, LE3 5B2; Or, email to support@kidsaw.co.uk.
Thank you for purchasing KIDSAW PUZZLE FURNITURE