



## SPEED RACER TABLE 2 STOOLS ASSEMBLY INSTRUCTION

WWW.KIDSAW.CO.UK

## Kidsaw Speed Racer Table & Stools assembly instructions

### Before you start

#### Warnings

Important: Retain all instructions for future use.  
Unwrap all packaging materials and place components on top of the carton box or a clean surface to prevent marks.  
This product should only be used on firm, level ground.  
Keep small parts out of reach of children.

#### Do's

Follow each assembly step in order to prevent incorrect assembly.  
Assemble on a clean soft surface to avoid damage.  
Check the pack and make sure you have all the parts.  
Ensure that this product is fully assembled as illustrated before use.  
When you are ready to start, make sure you have the right tools, plenty of space and a clean area for assembly.

#### Dont's

Do not use this product if parts are missing, damaged or worn.  
Do not recommend the use of power tools.  
Do not over tighten screws.

#### Number of people to assemble

One person to assemble.

#### Time to assemble

Under 10 minutes.


#### Tradesman's tips

So simple to slot together, you shouldn't need any tips. Other than put the kettle on before you start, it may be boiled by the time you have finished.


And for good measure, make sure you have the right tools.

1 x Pozzi-drive Screwdriver

### A) List of parts

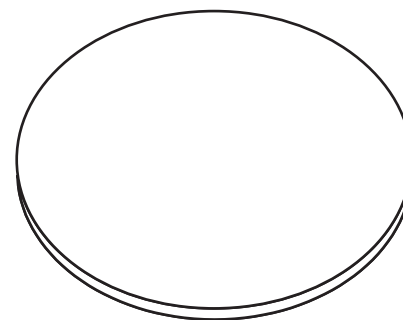


A) Table Top

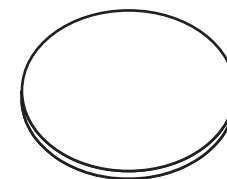

B) Stool Top x 2




 C) Table Legs x 4




D) Stool Legs x 8

### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

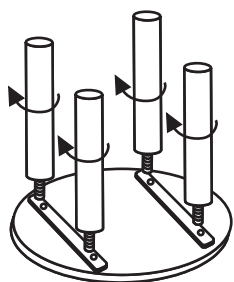


Step 1 - Slot stool legs onto stool top.

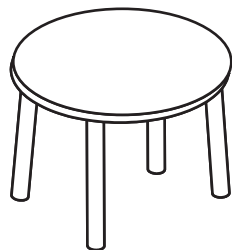


Assembly complete for stool

### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

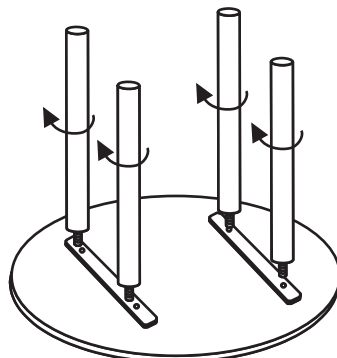

Step 2 - slot table legs onto table top.

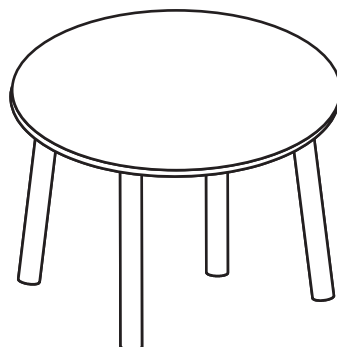

Assembly complete.

ANY QUESTIONS? GIVE US A CALL DIRECT

KIDSAW PUZZLE FURNITURE is designed and distributed by kidsaw limited,UK.  
For any queries, missing parts, comments or suggestions on the product, please call our customer support at +44 (0) 116 2519551 during Monday - Friday 9:00 a.m. to 4:30 p.m. ;  
Or, mail to 47-55 Northgate Street, Leicester, LE3 5BZ; Or, email to support@kidsaw.co.uk.  
Thank you for purchasing KIDSAW PUZZLE FURNITURE