

## SPEED RACER TOY BOX ASSEMBLY INSTRUCTION

WWW.KIDSAW.CO.UK

## Kidsaw Speed Racer Toybox assembly instructions

### Before you start

#### Warnings

Important: Retain all instructions for future use.  
Unwrap all packaging materials and place components on top of the carton box or a clean surface to prevent marks.  
This product should only be used on firm, level ground.  
Keep small parts out of reach of children.

#### Do's

Follow each assembly step in order to prevent incorrect assembly.  
Assemble on a clean soft surface to avoid damage.  
Check the pack and make sure you have all the parts.  
Ensure that this product is fully assembled as illustrated before use.

When you are ready to start, make sure you have the right tools, plenty of space and a clean area for assembly.

#### Dont's

Do not use this product if parts are missing, damaged or worn.  
Do not recommend the use of power tools.  
Do not over tighten screws.

#### Number of people to assemble

One person to assemble.

#### Time to assemble

Under 10 minutes.


#### Tradesman's tips

So simple to slot together, you shouldn't need any tips. Other than put the kettle on before you start, it may be boiled by the time you have finished.


And for good measure, make sure you have the right tools.

1 x Pozzi-drive Screwdriver


### A) List of parts

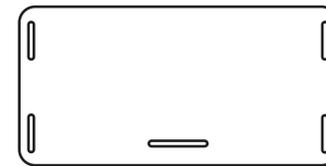


A) Front Panel

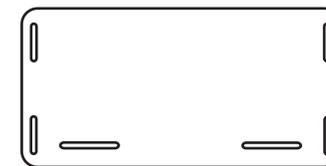

B) Back Panel

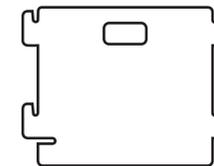

C) Side Panels x 2

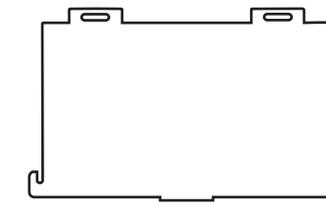


D) Base Panel




E) T-Lock


### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

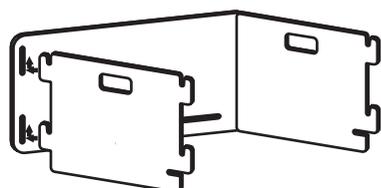

Step 1 - Slot side panels onto back panel.

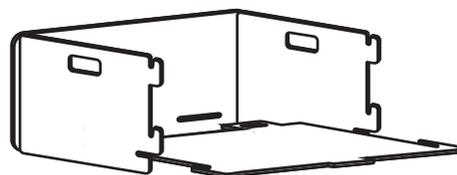


Step 2 - Insert base panel onto back panel.

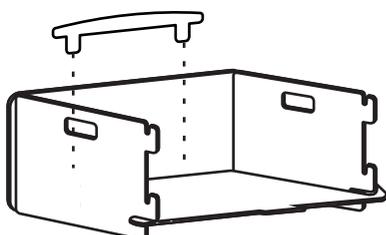


Step 3 - Slot T-Lock on back panel.

### B) Steps to Assembly ADULT ASSEMBLY REQUIRED

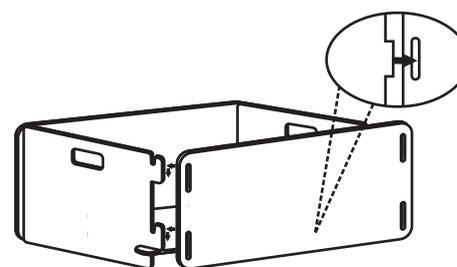

Step 4 - Slot front panel onto side and base panels.

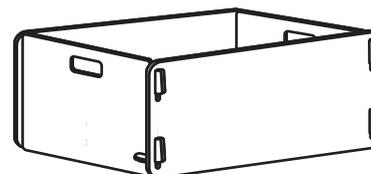

Assembly complete.

ANY QUESTIONS? GIVE US A CALL DIRECT