


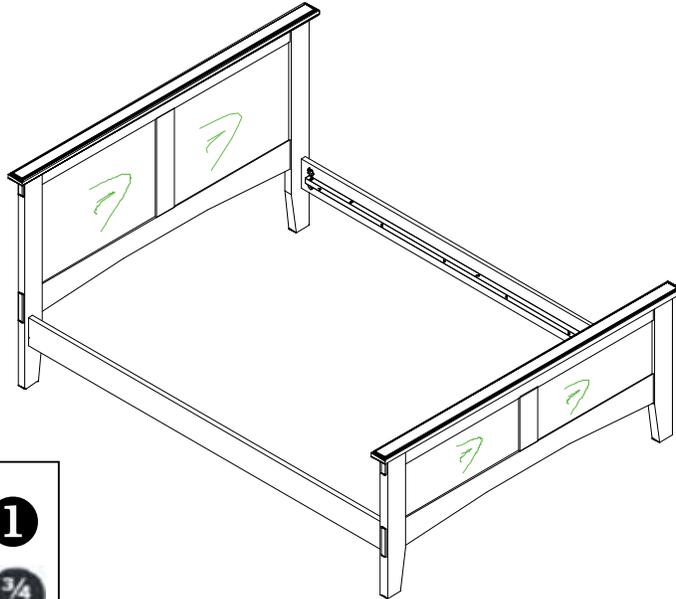

## KIMBERLEY BED

# Assembly Instructions



Minimum No. of people  
Recommended to assemble  
This product.

1

Approx assembly time:

3/4  
hours





NOTE: It will require two people to assemble this bed. Assembly should be carried out in the room that the bed will be used in.

**Before you  
Start, here  
is some  
helpful advice**


1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fittings out of children's reach.

In the unlikely event that this product has missing or damaged parts, please call 0870 3333 612 to obtain spares

# Component parts and fittings contained in the box

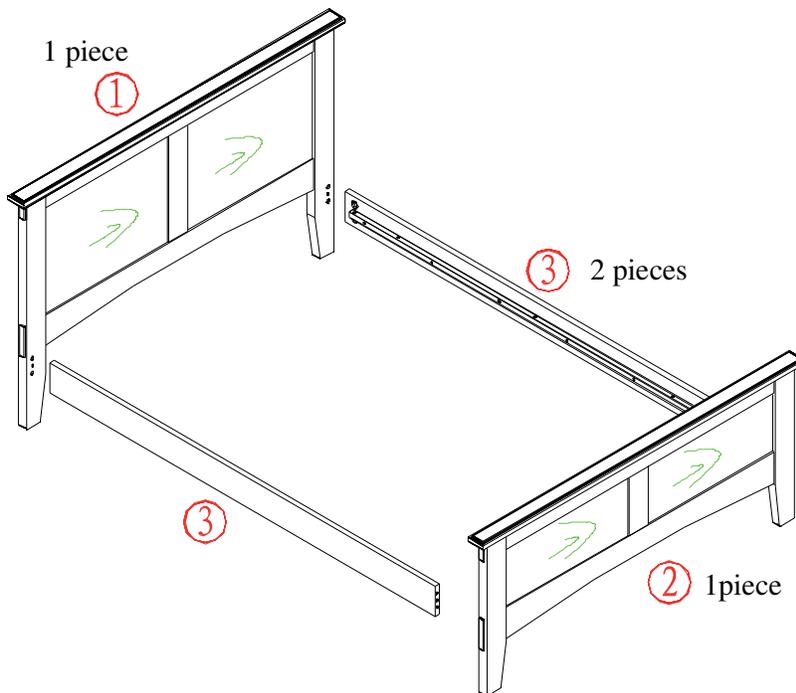
PARTS	Fittings
 <p>1 piece ①</p> <p>③ 2 pieces</p> <p>③ 1 piece</p>	<p><b>A</b>  8pcs</p> <p>Connector 8pcs</p>
	<p><b>B</b>  8pcs</p> <p>Connecting bolt 8pcs</p>
	<p><b>C</b>  8pcs</p> <p>M8 Nut 8pcs</p>
	<p><b>D</b>  8pcs</p> <p>Φ8 Spring washer 8pcs</p>
	<p><b>E</b>  4pcs</p> <p>Dowel 4pcs</p>
	<p><b>F</b>  6pcs</p> <p>M6 x 35 Bolt 6pcs</p>
	<p><b>G</b>  6pcs</p> <p>M6 x 22 Jcn Nut 6pcs</p>
	<p><b>H</b>  1pc</p> <p>Spanner 1pc</p>
	<p><b>I</b>  1pc</p> <p>4MM Allen key 1pc</p>

# ASSEMBLY

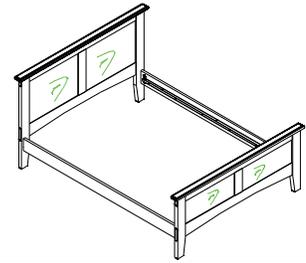


1) Screw the connecting bolt (B) into the headboard (1) and footboard (2).

STEP 1

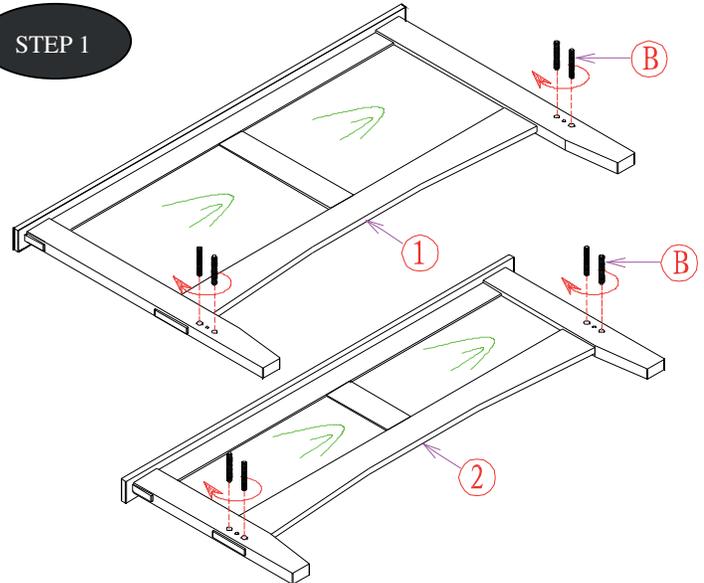


1) Knock the dowels (E) into the holes indicated on the side rail (3).  
2) Carefully fit the side Frames to the headboard and footboard.  
Use connectors (A), Spring Washer (D) and Nuts (C) to fix the unit. (See inset).

STEP 2

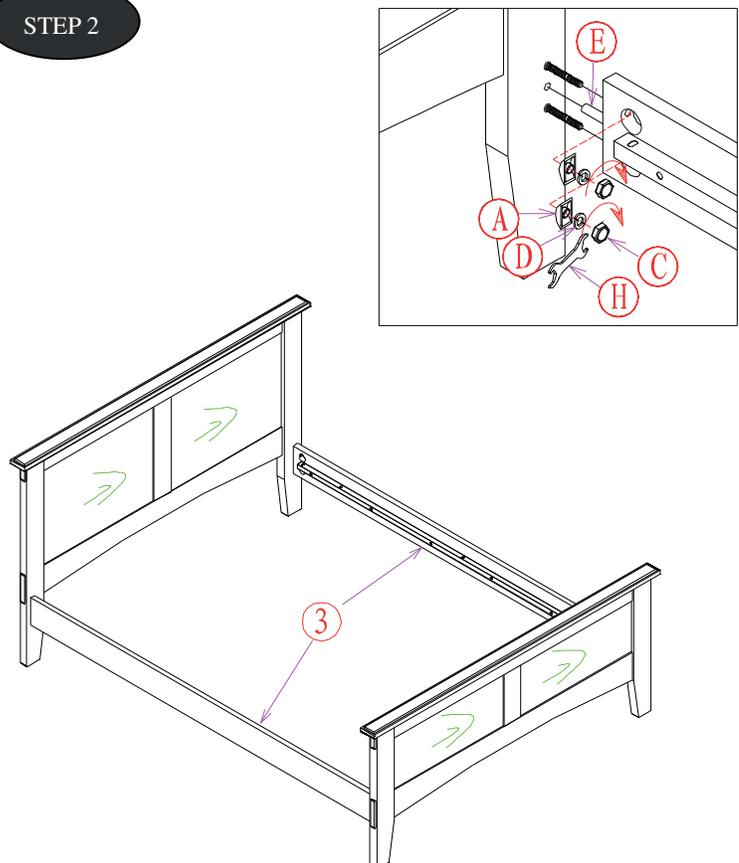

# ASSEMBLY

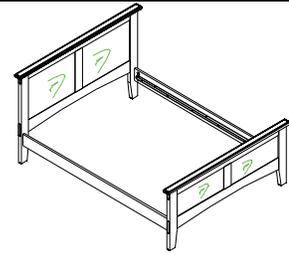


**NOTE:** Slats not supplied shown for reference only.

Both slats on “step 3---step 6” can be assembled to the bedstead. you can to make a choice between the two slats.

- 1) Adjust the support leg height have the four mode, you can according to the bed height, choice the right mode to fix in the “STEP 3”.
- 2) If need, you can adjust by screwing in or out the lower part in the bottom of the leg .


## STEP 3

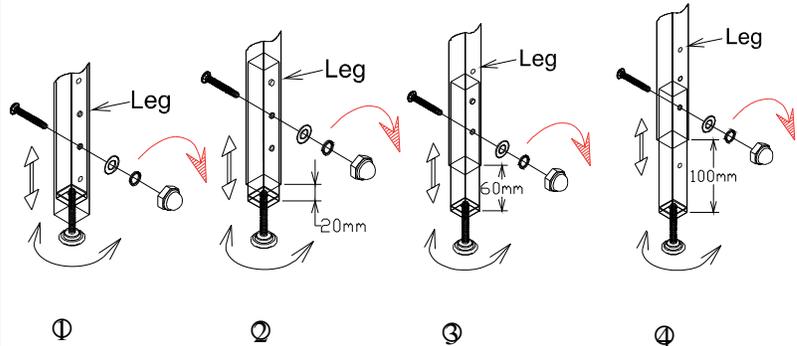


Choice this mode

## STEP 4

- 1) Use the bolt to fix the leg onto the slats frame.

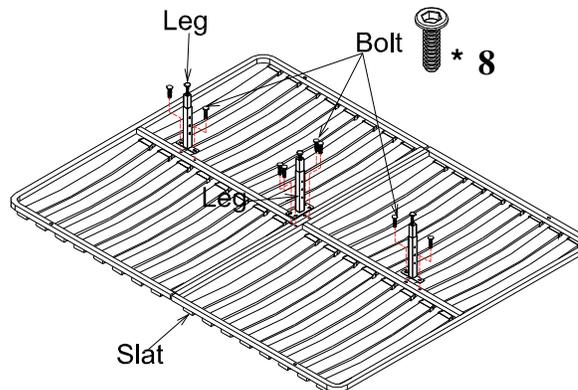

# ASSEMBLY

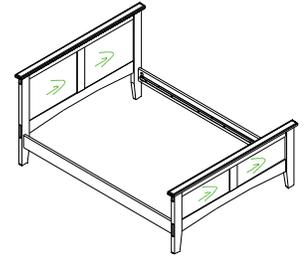

1) Carefully locate the slats frame onto the bed.

2) Use bolt (**F**) and JCN Nut (**G**) to fix the slats frame onto the bed.

## STEP 5



1) Carefully locate the slats frame onto the bed.

2) Use bolt (**F**) and JCN Nut (**G**) to fix the slats frame onto the bed.

## STEP 6

