




FIRENZA BED

Assembly Instructions

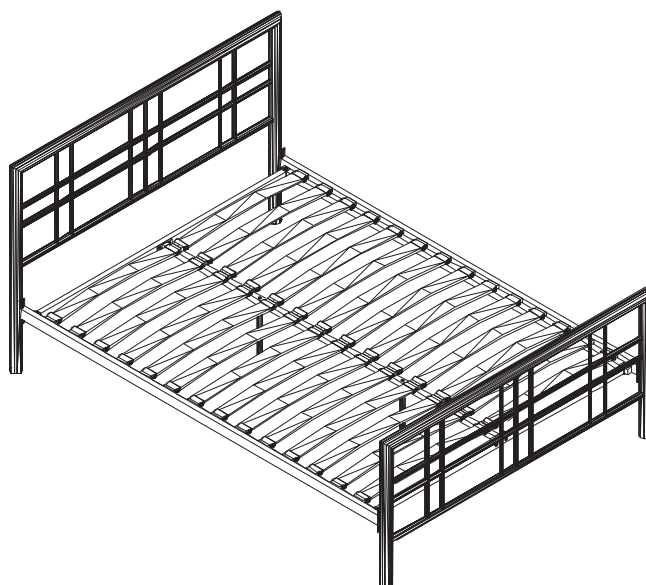

NOTE: It will require two people to assemble this bed. Assembly should be carried out in the room that the bed will be used in.


**Before you
start, here
is some
helpful advice**

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fittings out of children's reach.

In the unlikely event that this product has missing or damaged parts, please call 08442 920000 to obtain spares

Component parts and fittings contained in the box

PARTS

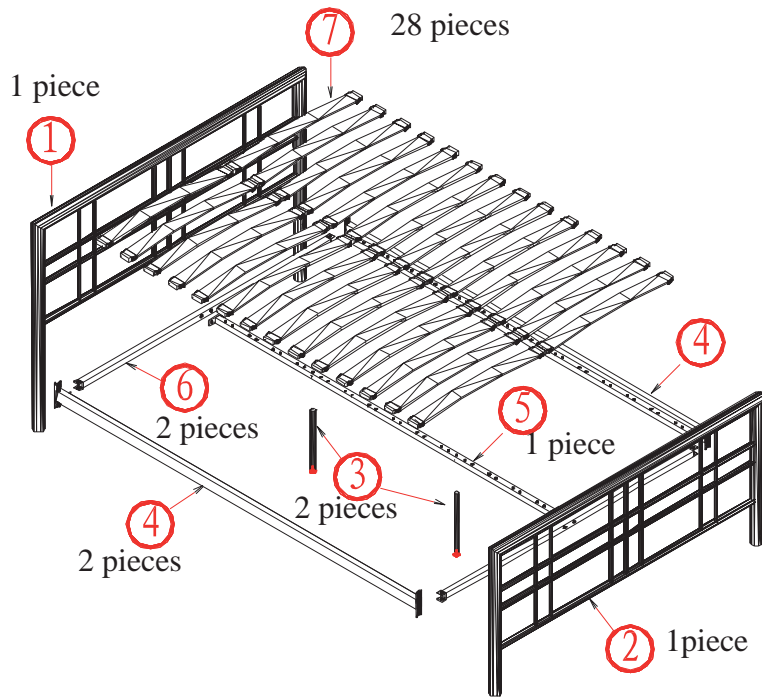


Fittings



M8 x25mm 8pcs



M6 x 20mm 4pcs




Washer 8pcs



Spring washer 8pcs




Plastic cap 14pcs



Plastic cap 28pcs



4MM Allen key 1pc



5MM Allen key 1pc



M6 x 40mm 4pcs




M6 Wing Nut 4pcs

ASSEMBLY




1) Connect the headboard **1**, foot board **2** and side rail **4** using the washer **C**, spring washer **D** and bolts **A**.

STEP 1

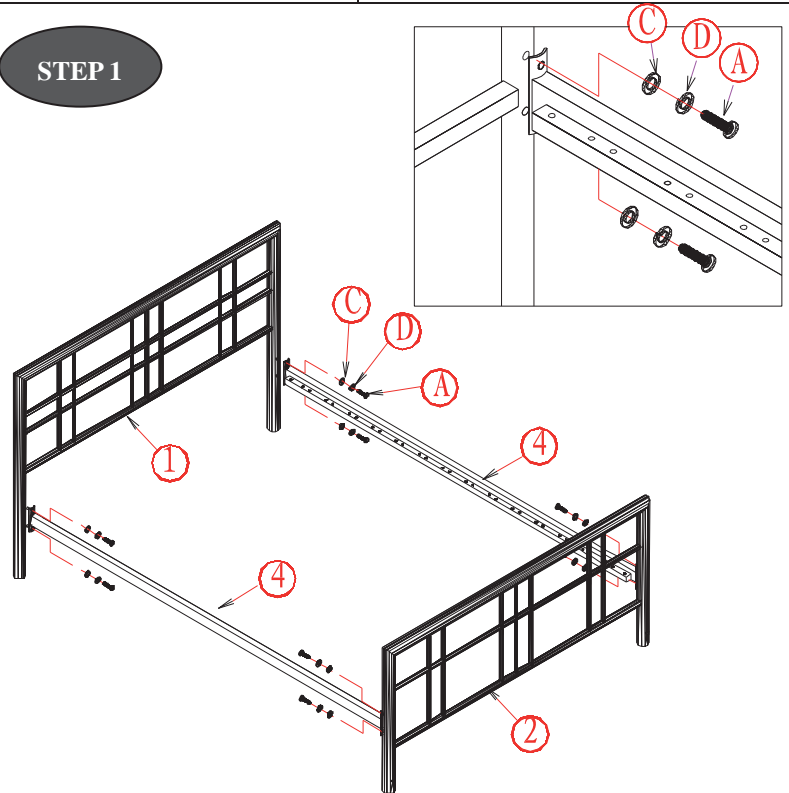


1) Use the Bolt **I** and Wing nut **J** to fix the end rail **6** and side rail **4**.

STEP 2

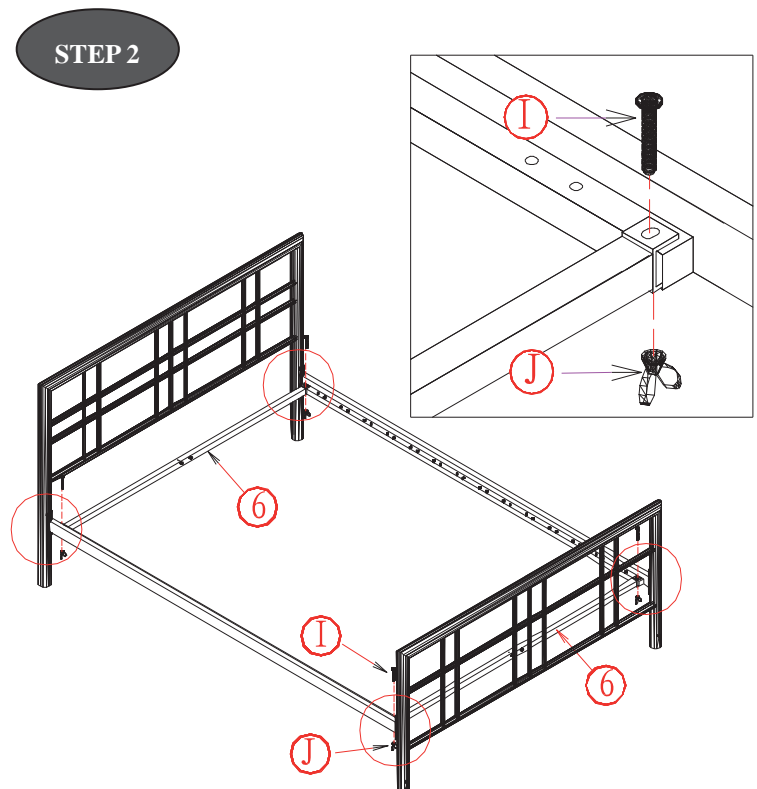


ASSEMBLY

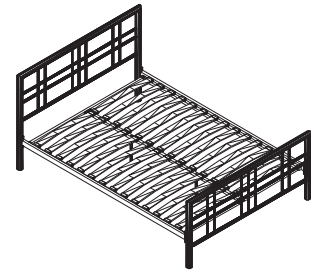

- 1) Use the bolts **B** to fix the headboard **1** and Middle rail **5**.
- 2) Loosen the bolt from the support leg **3**, then use the Bolts to fix the Support leg **3** and Middle rail **5**.

STEP 3

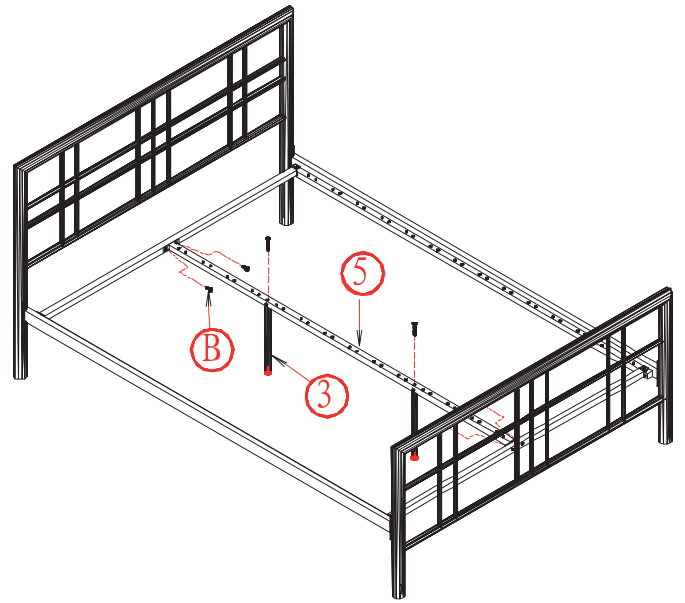

- 1) Use the Plastic cap **E** and Plastic cap **F** to connect the wood slat **7**, slot the end caps **F** into the holes of side rail. Then press down the Centre cap **E** onto Centre rail on the guide holes with the rubber hammer.

STEP 4

