




215-00945 (Solid slats)

Glacier King Bed

215-00946 (Sprung slats)

## Assembly Instructions

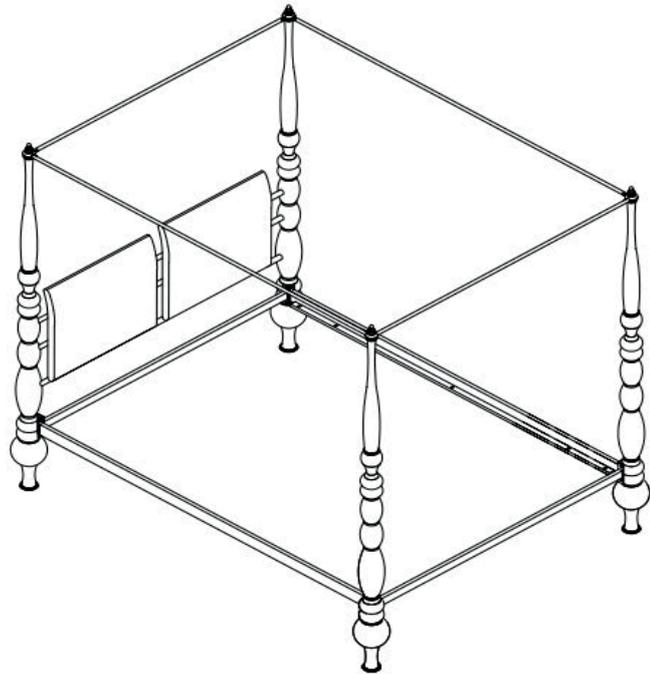

Minimum No. of people recommended to assemble this product:

2

Approx assembly time:

1/2 hours


### Before you Start, here are some helpful advices.

1. We suggest you spend a short time reading through this leaflet and then follow the simple step by step instructions.
2. If you follow the instructions carefully the end result should be worth the effort.
3. Do not discard any of the packaging until you have checked that you have all the parts and the pack of fittings.
4. Assemble this product on a carpet.
5. To ensure an easier assembly, we strongly advise that all fittings are only finger tightened during initial assembly. Only upon completion of the Assembly should all fixing points be fully tightened.
6. We recommend a periodic check on all fixing points to make sure they remain fully tightened.
7. Keep glue and fittings out of children's reach.

In the unlikely event that this product has missing or damaged parts, please call 08442 920000 to obtain spares

# PARTS

# Fittings

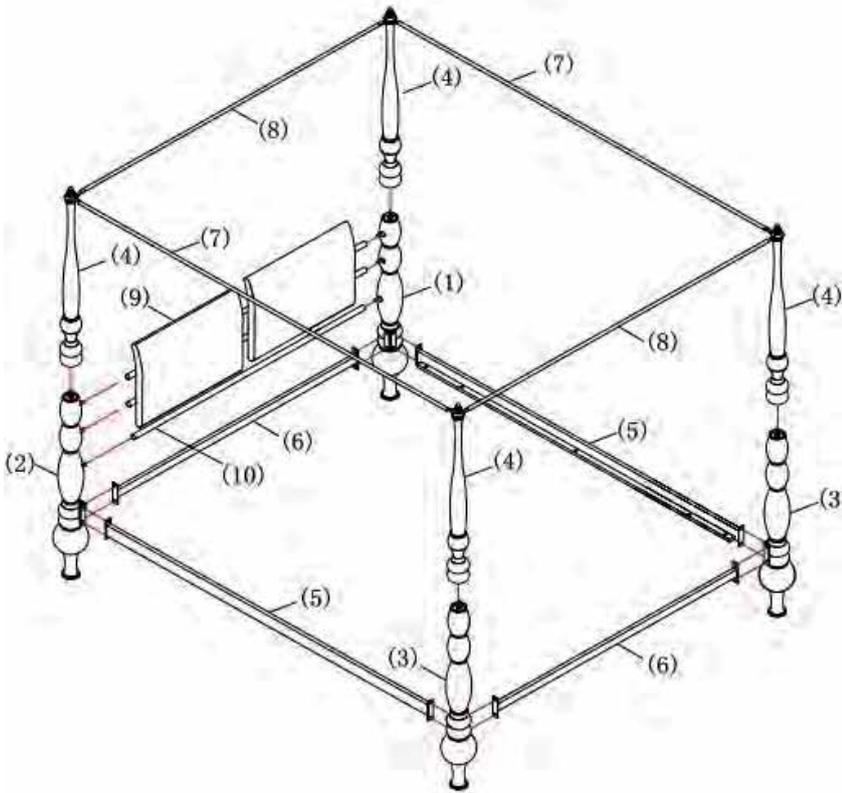

## NO. PART LIST QTY

(1) HB bottom post right	1
(2) HB bottom post left	1
(3) FB bottom post	2
(4) Top Posts	4
(5) Side Rails	2
(6) Cross rails	2
(7) Long canopy rails	2
(8) Short canopy rails	2
(9) HB Panel	1
(10) HB cross tubing	1

**A**  1x16pcs


**B**  **M6x10mm x 14pcs**

**C**  **M6x35mm x 6pcs**

**D**  **M6 x 6pcs**

**E**  **Washer (16mm) x 22pcs**


**F**  **Plastic Washer x 16pcs**

**G**  **Allen key x 2pcs**

**H**  **Spring washer x 16pcs**

**I**  **Washer (13mm) x 14pcs**


# ASSEMBLY

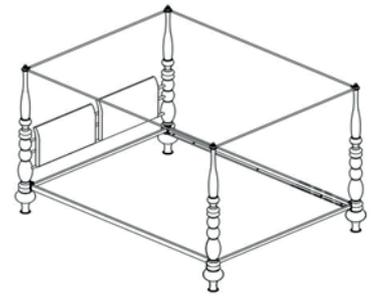


## STEP1

Attach Cross rails (6) to HB bottom posts (1)(2)(3) by using bolts A, Plastic washer F, washer E, Spring Washer H, and tighten with Allen Key G.

Attach Side rail (5) to HB bottom posts (1)(2)(3) by using bolts A, Plastic washer F, washer E, Spring Washer H, and tighten with Allen Key G.

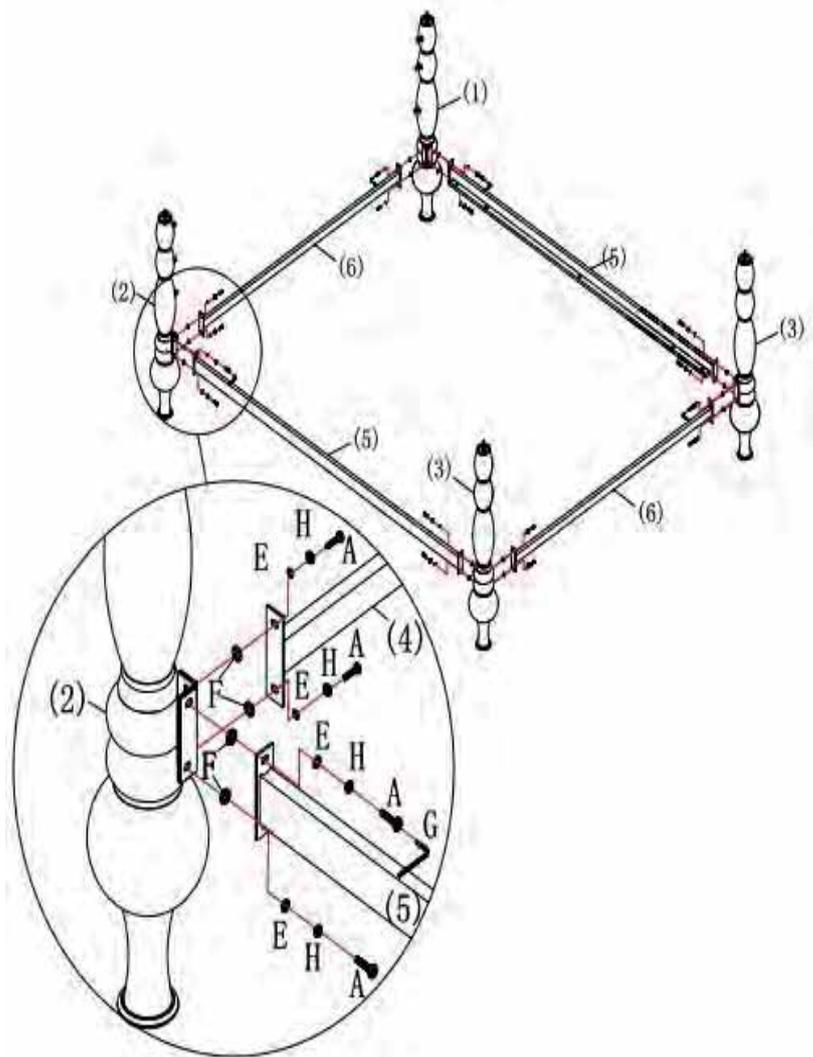


# ASSEMBLY

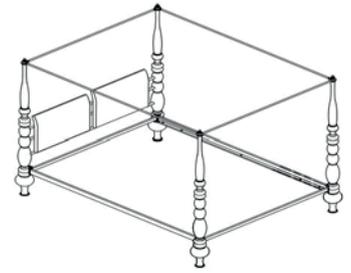


## STEP 2

Insert ends of HB panel (9) and HB Cross tubing (10) into holes on HB bottom posts (1)(2), secure the HB panel (9) onto posts by using bolts B, washer I and tighten with Allen Key G.

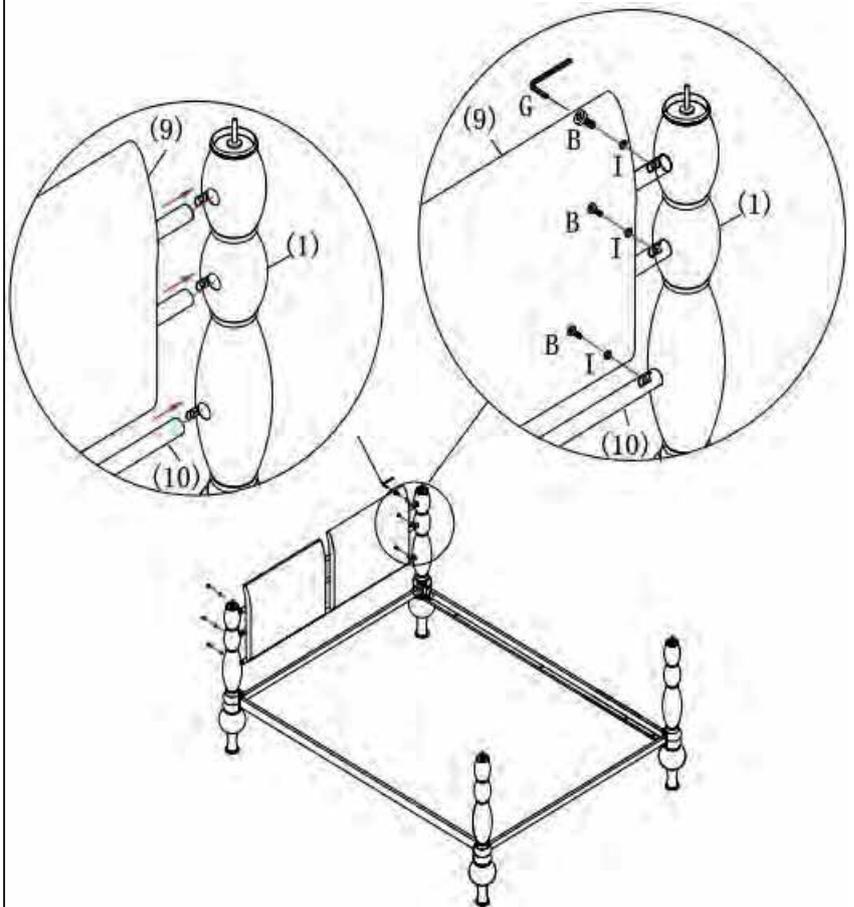


# ASSEMBLY

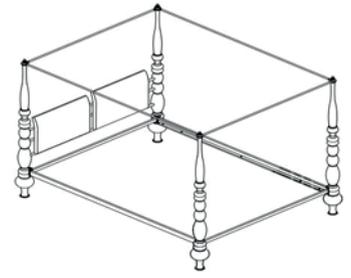


## STEP 3

Screw the Top Posts (4) onto bottom posts (1)(2)(3) by turning the top posts (4) clock-wise.

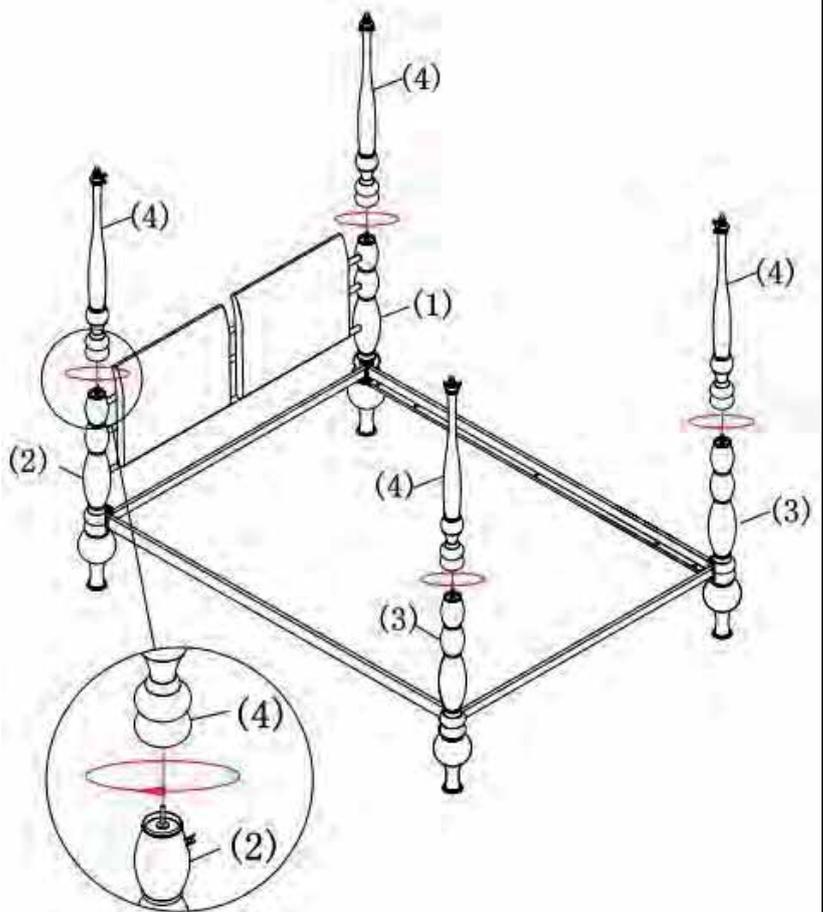

# ASSEMBLY

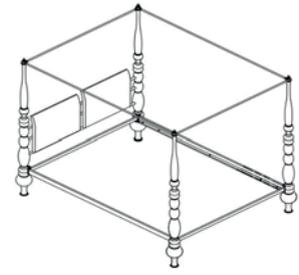


Loosen the metal balls on top of posts, align the top section of the posts in right angle. And insert the canopy rails (7)(8) into holes on top posts (4).


Secure the canopy rails (7)(8) onto top posts (4) by using bolts B, washer I, and tighten with Allen Key G.

Tighten the metal balls on top of posts.

## STEP4

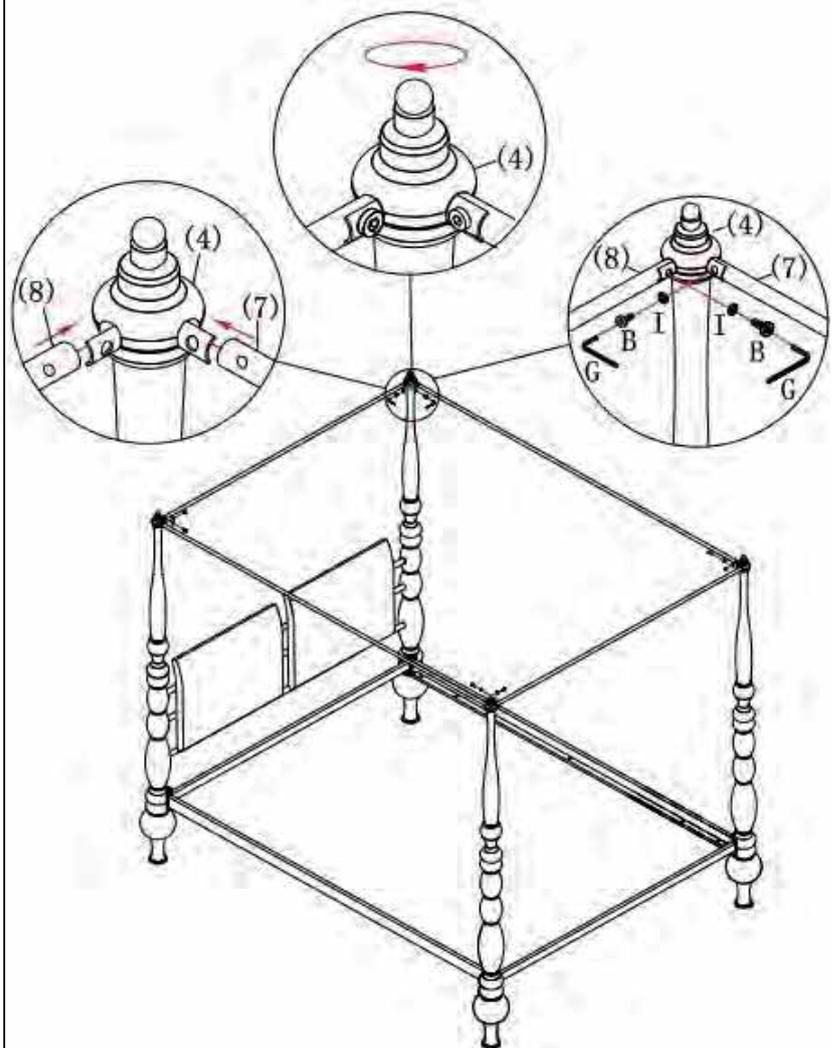

# ASSEMBLY

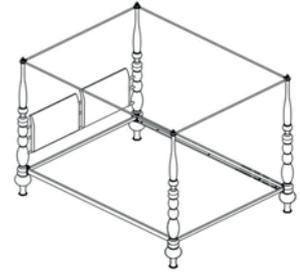

**NOTE:** Slats not supplied shown for reference only.


Both slats on "step 5" and "step 6" can be assembled to the bedstead. you can make a choice between the two slats.

## OPTION "A": DREAMS FIXED WOOD SLATS


( 1 ) Carefully locate the slats onto the unit.

( 2 ) Use bolt (C) and JCN nut (D) to fix the unit using Allen Key (E)

### STEP 5

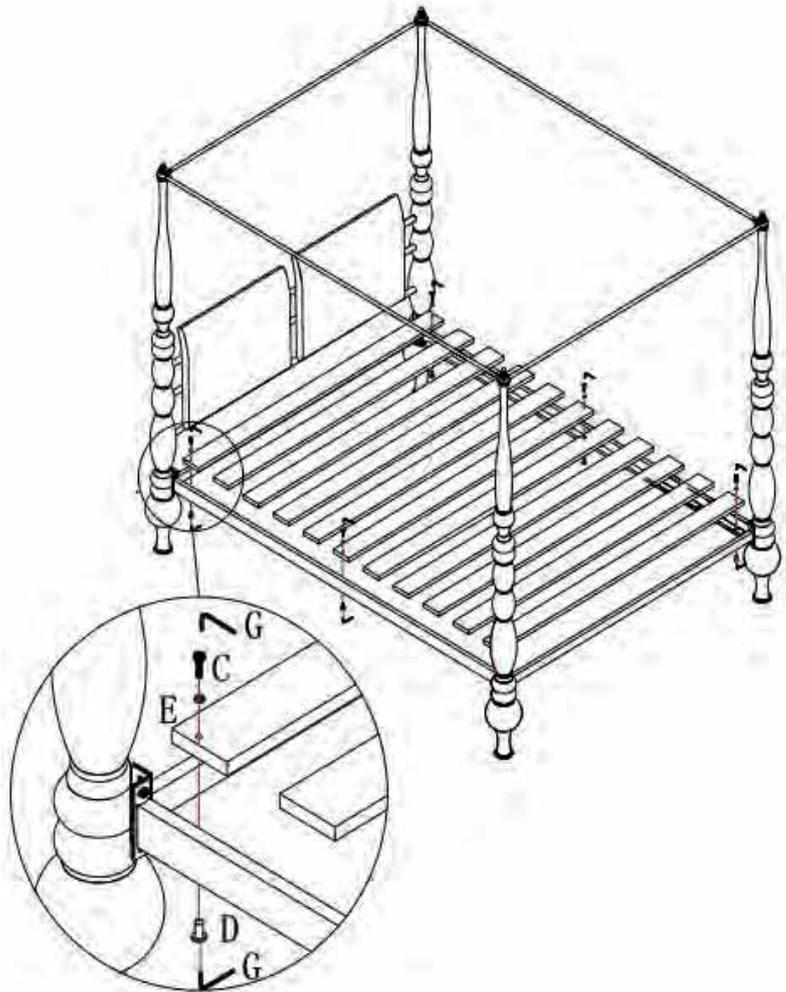

# ASSEMBLY

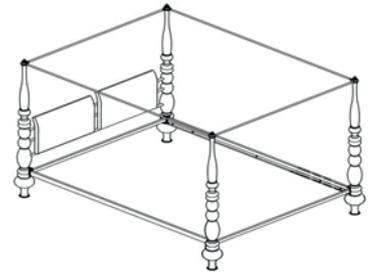

## STEP 6

### OPTION "B": DREAMS SPRUNG SLATS

(1) Use the bolt to fix support leg onto the slat frame. Please note that these bolts are to be found inside the slat frame box.

(2) Carefully locate the slats onto the unit.

(3) Use bolt (B) and JCN nut (C) to fix the unit using Allen Key (F).

